

SC5000

INSTRUCTION MANUAL

Revision Date: 12-12-24
Operating Program Revision: 5

TABLE OF CONTENTS

Page
Number

SECTION 1

LEVEL CONTROL

Table Of Contents	1-2
Description of Features Available in the Level Control Mode	1-3
Connection Diagrams	1-25
SC5000-CTS-HMI Screens	1-32
SC5000-LED-HMI Menu	X-1

SECTION 2

FLOW CONTROL

Table Of Contents	2-2
Description of Features Available in the Flow Control Mode	2-3
Connection Diagrams	2-19
SC5000-CTS-HMI Screens	2-21

SECTION 3

PRESSURE CONTROL

Table Of Contents	3-2
Description of Features Available in the Pressure Control Mode	3-3
Connection Diagram	3-20
SC5000-CTS-HMI Screens	3-21

SECTION 4

BOOSTER DISCHARGE PRESSURE CONTROL

Table Of Contents	4-2
Description of Features Available in the Booster Discharge Pressure Control Mode	4-3
Connection Diagram	4-22
SC5000-CTS-HMI Screens	4-23

SECTION 5

BOOSTER SUPPLY PRESSURE CONTROL

Table Of Contents	5-2
Description of Features Available in the Booster Supply Pressure Control Mode	5-3
Connection Diagram	5-20
SC5000-CTS-HMI Screens	5-21

TABLE OF CONTENTS

Page Number

SECTION A

DISCRETE INPUTS

Description of Operation	A-1
Functions	A-2
Setup	A-7
Status	A-9
Connection Diagrams	A-11
SC5000-CTS-HMI Screens	A-13

SECTION B

RELAY OUTPUTS

Description of Operation	B-1
Functions	B-1
Setup	B-3
Status	B-3
Connection Diagram	B-4
SC5000-CTS-HMI Screens	B-5

SECTION C

ANALOG INPUTS

Description of Operation	C-1
Functions	C-1
Setup	C-3
Status	C-3
Calibration	C-4
Connection Diagram	C-6
SC5000-CTS-HMI Screens	C-7

SECTION D

ANALOG OUTPUTS

Description of Operation	D-1
Functions	D-1
Setup	D-2
Status	D-2
Calibration	D-3
Connection Diagram	D-4
SC5000-CTS-HMI Screens	D-5

SECTION E

COMMUNICATION PORTS

Description of Operation	E-1
Remote Control Command Canceling	E-2
Ethernet Port ENET1 & ENET2 Setup	E-3
RS232 Port COM1 Setup	E-5
SC5000-CTS-HMI Screens	E-6

TABLE OF CONTENTS

Page
Number

SECTION F

FAULT CODES

Description	F-1
-------------------	-----

SECTION G

PARAMETER SECURITY

Description	G-1
SC5000-CTS-HMI Screens	G-3

SECTION H

BACKUP or RESTORE SETUP PARAMETERS using a USB FLASH DRIVE

Description	H-1
SC5000-CTS-HMI Screens	H-2

SECTION I

RESTORE SETUP PARAMETERS to FACTORY DEFAULTS

Description	I-1
SC5000-CTS-HMI Screens	I-1

SECTION J

PULSE FLOW METERS

Description	J-1
Connection Diagrams	J-5
SC5000-CTS-HMI Screens	J-6

SECTION K

ANALOG FLOW METERS

Description	K-1
Connection Diagrams	K-5
SC5000-CTS-HMI Screens	K-6

SECTION L

LEVEL PROBE METER

Description	L-1
Connection Diagrams	L-3
SC5000-CTS-HMI Screens	L-4

SECTION M

ANALOG LEVEL METERS

Description	M-1
Connection Diagrams	M-4
SC5000-CTS-HMI Screens	M-6

TABLE OF CONTENTS

Page
Number

SECTION N

ANALOG PRESSURE METERS

Description	N-1
Connection Diagrams	N-3
SC5000-CTS-HMI Screens	N-4

SECTION O

ANALOG CURRENT METERS

Description	O-1
Connection Diagrams	O-4
SC5000-CTS-HMI Screens	O-5

SECTION P

PUMP STATUS

Pump Call to Run Status	P-1
Pump Available For Service Status	P-1
Elapsed Time Meters	P-1
Last Run Cycle Time Meters	P-2
Pump Start Counters	P-2
SC5000-CTS-HMI Screens	P-3

SECTION T

CONTROL & STATUS BITS

Description	T-1
-------------------	-----

SECTION U

CONTROLLER DATA

Description	U-1
SC5000-CTS-HMI Screens	U-2

SECTION V

ENCLOSURE MECHANICAL DRAWINGS

Enclosure Front	V-1
Enclosure Left Side	V-2
Enclosure Right Side	V-3
Enclosure Top	V-4

TABLE OF CONTENTS

Page
Number

SECTION W

SC5000-CTS-HMI

Description	W-1
Enclosure Front / Panel Cutout	W-2
Enclosure Rear and Sides	W-3

SECTION X

SC5000-LED-HMI

Description	X-1
Parameter Menu	X-2
Enclosure Front / Panel Cutout	X-26
Enclosure Rear and Sides	X-27